



Normally closed switch inside J1.  
Opens when external supply is connected.

Rev A.17 03/07/08

**NUE-PSK**  
M. Cram, W8NUE  
G. Heron, N2APB