

P2 PROGRAMMING HEADER
 1 x 8 pinheader
 (on bottom of board)

RxD 8
 TxD 6
 7
 RTS/ 5
 CTS/ 4
 RESET/ 2
 PROG/ 3
 GND 1


Shunt placed on pins 4 and 5 after U1 is programmed

To Modem's "Field Programming" connector (P4)
 J1

GND
 RX
 TX
 +5V

2-wire cable to modem board pads 'c' and 'a' in lower-left area of U1 controller.

P3 Extra Signals

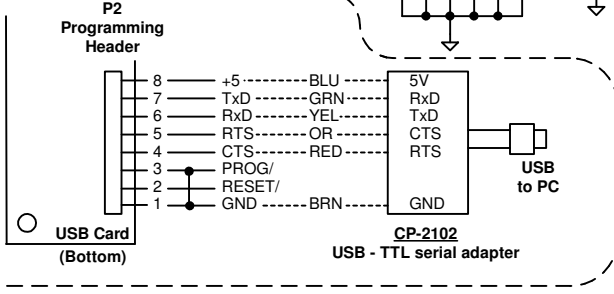

- NOTES:**
- 1) Real-time Clock Calendar (RTCC) components are not supplied in kit (U3, U4, C5, C15, C16, X2, BATT)
 - 2) 'A' jumpers are necessary when RTCC components not in place.
 - 3) U1 must be programmed before use. See manual for simple procedure.

NUE-PSK USB Option
 N2APB 06/02/2009